currys essentials

GLASS FRONTED WINE COOLER

INSTRUCTION MANUAL
CWC16B10

Contents

Unpacking **3**

Product Overview **4**

Installation **4**

Handle Assembly **5**

Levelling the Wine Cooler **5**

Cleaning Befor Use **6**

Before Using Your Wine Cooler **6**

Operating Instructions **7**

- Switching On Your Wine Cooler 7
- Stacking the Wine Bottles 7
- Noises Inside the Wine Cooler 8
- Storing Wine in Your Wine Cooler 8
- Filling Your Wine Cooler 9
- Shut the Door 9

Cleaning **10**

- Cleaning the Inside of the Wine Cooler 10
- Cleaning the Outside of the Wine Cooler 10
- Cleaning Tips 10

Maintenance **11**

- Care When Handling 11
- Installation 11
- Servicing 11
- Switching Off for Longer Periods of Time 11

Disposal **11**

Specification **12**

Safety Warnings **13**

Congratulations on the purchase of your new Currys Essentials Wine Cooler. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all packaging from the wine cooler. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

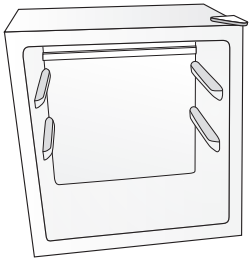

The Main Unit

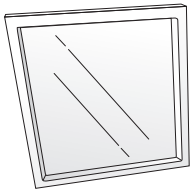

Door x 1
P.N.: SB40042000000



Handle x 1
P.N.: RB80600750000
Screws x 2
P.N.: RX401000101168



Shelves x 2
P.N.: RB8060027200

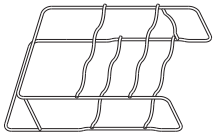

Bottle Rack x 1
P.N.: RB80600027300

Instruction Manual
P.N.: RB30200053400

If items are missing or damaged, please contact Partmaster (UK only).
Tel: 0870 6001 338 for assistance.

Product Overview

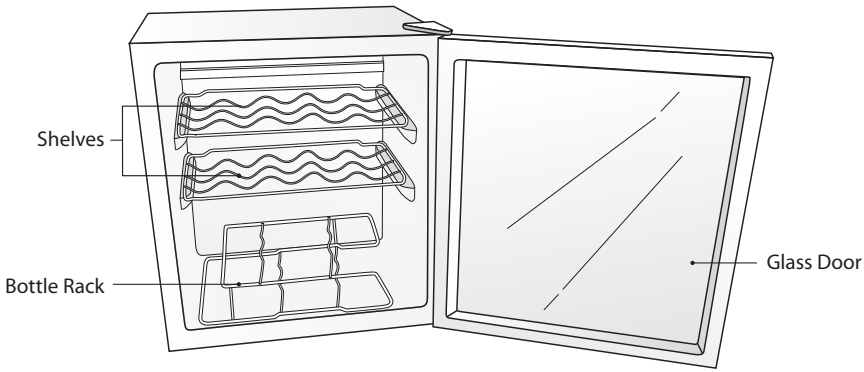

Installation

Location

When selecting a position for your wine cooler you should make sure the floor is flat and firm, and the room is well ventilated with an average room temperature of between 16°C and 32°C. Avoid locating your wine cooler near a heat source, eg. cooker, boiler or radiator. Also avoid direct sunlight. If you are placing your wine cooler in an outbuilding such as a garage or annex ensure that the wine cooler is placed above the damp course, otherwise condensation will occur on the wine cooler cabinet. Never place the wine cooler in a wall recess or into fitted cabinets or furniture.

When your wine cooler is working, the sides may become warm. You may refer to the Overall Space Required in the Specification section. Please ensure it is positioned at the correct distance from the wall. The wine cooler door can open to the right or the left, depending on what better suits the location. If you want to have the door swing reversed, we recommend that you to contact the Service Centre or a qualified technician to assist you. You should only try to reverse the door yourself if you believe that you are qualified to do so.

Handle Assembly

1. Take out the handle and the 2 screws from the accessories.

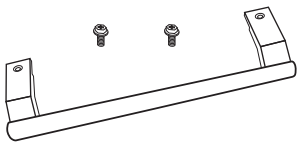

2. Hold the handle onto the door edge then use a screwdriver and the 2 screws provided to fix the handle onto the door edge.

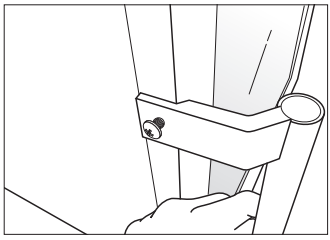

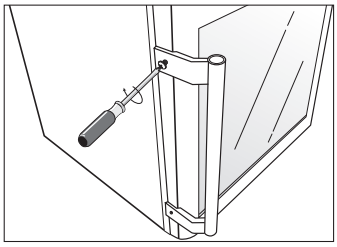

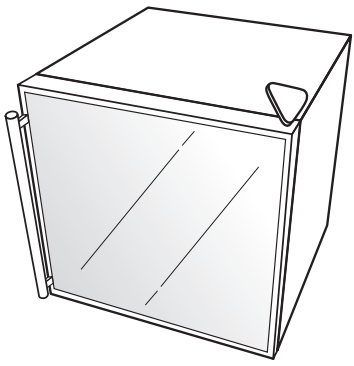

Levelling the Wine Cooler

To do this use the two levelling feet at the front of the wine cooler.

If the wine cooler is not level, the door and magnetic seal alignments will not be covered properly.

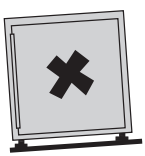

Cleaning Before Use

Wipe the inside of the wine cooler with a weak solution of bicarbonate soda. Then rinse with warm water using a 'wrung-out' sponge or cloth. Wipe completely dry before replacing the shelves and bottle rack. Clean the exterior of the wine cooler with a damp cloth.

If you require more information refer to the **CLEANING** section.

⚠
- **Before Plugging in YOU MUST**
- Check that you have a socket which is compatible with the plug supplied with the wine cooler.
- **Before Turning On!**
  Do not turn on the appliance for two hours after moving the wine cooler. The coolant fluid needs time to settle.

Before Using Your Wine Cooler

Before placing any wine in your wine cooler, turn it on and wait for 24 hours, to make sure it is working properly and to allow the wine cooler to fall to the correct temperature. Your wine cooler should not be overfilled.

Operating Instructions

Switching On Your Wine Cooler

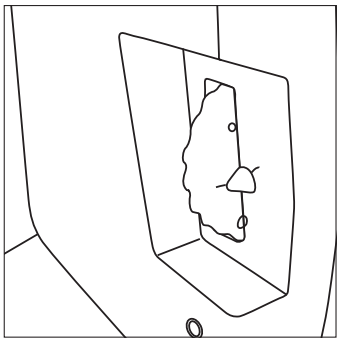

1. The internal temperature of your wine cooler is controlled by a thermostat. There are 7 settings, of which position 7 is the coldest and position 0 turns the wine cooler off.
2. Make sure that the Thermostat Control Dial, located inside the wine cooler on the right hand side is set to 7.
3. After the wine cooler has been on for 20 minutes adjust the Thermostat Control Dial to 5 – 6.
4. This is the recommended setting for the wine cooler when operating at normal room temperature (between 16°C and 32°C).
5. The wine cooler may not operate at the correct temperature if it is in a particularly hot or a particularly cold room, or if you open the wine cooler door often.
6. If you are concerned that your wine cooler is not being kept cold enough and wish to check the temperature you will need a special wine cooler thermometer. These are available from most supermarkets and hardware shops.
7. Place the thermometer on the middle shelf of the wine cooler, where it can be read easily. Leave overnight, the temperature in the wine cooler should be between 5°C and 20°C depending on the type of wine.
8. In the 0 position the wine cooler will not operate, but the power supply remains connected.

Stacking the Wine Bottles

The shelf system has been designed so that a range of shelf heights can be selected. All the shelves can be adjusted. There is also a bottle rack at the bottom of the wine cooler.

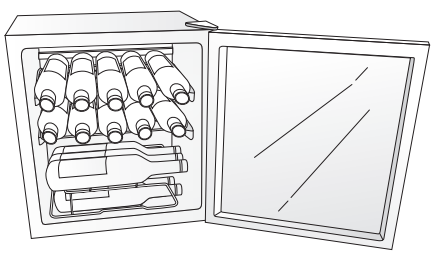

⚠ **Max Capacity :**
16 bottles

Noises Inside the Wine Cooler

If you have not owned a wine cooler before, you may notice that it makes some rather unusual noises. Most of these are perfectly normal, but you should be aware of them!

These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your wine cooler.

This is the compressor motor working, as it pumps the refrigerant around the system.

Storing Wine in Your Wine Cooler

One benefit of your new wine cooler is that you can simulate the conditions of a wine cellar.

By using a wine cooler thermometer you can ensure a constant temperature of around 5-20°C, which is ideal for storing wine. Make sure the bottles are lying on their sides. This ensures the wine inside is in contact with the cork, which stops the cork drying out, shrinking, letting air in and spoiling the wine. After a bottle has been opened, the wine comes into contact with air which will start to oxidise the wine. This generally occurs on the wine's contact surface, leaving the remaining wine in good condition. By leaving your bottle standing, you minimise the surface area of the wine in contact with air.

If you're serving white, rose or sparkling wine, chill it lightly for at least two hours in the wine cooler before serving. Most reds should be served at room temperature, or in the case of lighter reds like Beaujolais, very slightly chilled.

Opened wine will remain in good condition for up to two days (for delicate whites) or three days (for rich reds) as long as the bottle is resealed and stored in your wine cooler. Special stoppers that keep sparkling wine and Champagne bubbling for one or two days after opening can be bought at most good wine shops. When storing leftover wine, attempt to minimise the oxidation process of the wine. You can use a 'vacuum' which pumps out the air in the bottle leaving a semi-vacuum. The wine should last for about two weeks.

However, if it is a good quality wine and you intend to finish it within one week, all you'll need to do is to replace the cork and leave it standing in your wine cooler.

Different wines are best kept at different temperatures. To choose the temperature at which to store your wines please consult the table below.

Serving Temperatures		
Wine Type	°F	°C
Rose Wine	48-54	9-12
White Wine	48-58	9-14
Sherry (Light)	48-58	9-14
Red Wine	57-68	13-20
Fortified Wine	57-68	13-20
Sherry (Dark)	57-68	13-20

Filling Your Wine Cooler

When filling your wine cooler the greater the amount of wine placed inside the wine cooler from room temperature, the longer it will take to cool them to the desired temperature. You may wish to temporarily turn the Thermostat Control Dial to a higher setting to speed up the cooling process. If you do this remember to return it to the previous setting once the wines have reached the required temperature in order to conserve energy.

Shut the Door

⚠ To prevent cold air escaping, limit the number of times your open the door.

Cleaning

Cleaning the Inside of the Wine Cooler

There is usually no need to defrost the wine cooler as any ice that is deposited on the back wall will defrost automatically.

1. Before cleaning the wine cooler always switch off and disconnect the mains supply.
2. Remove all the shelves and detachable accessories and wash in warm soapy water, rinse and dry thoroughly.
3. If any ice has been deposited on the rear wall, leave the door open and wait until it begins to thaw. As the solid frost loosen, prize it away with a plastic scraper and remove. Never use metal or sharp instruments to remove the ice deposit.
4. You should clean the interior of the wine cooler with a weak solution of bicarbonate of soda.
5. Check that the drain outlet at the rear wall of the wine cooler compartment is clear of debris as this will affect the automatic defrosting.
6. Rinse the wine cooler with warm water using a clean 'wrung-out' sponge or cloth. Then, wipe it dry before replacing the shelves and accessories.
7. Plug in and switch on the mains supply.

Cleaning the Outside of the Wine Cooler

- Use a damp cloth to clean the wine cooler exterior and a glass cleaner on the door. Make sure that the door is closed, to prevent polish getting on the magnetic door seal or inside.

Cleaning Tips

- Condensation may appear on the outside of the wine cooler. This maybe due to a change in room temperature. Wipe off any moisture residue. If the problem continues, please contact a qualified technician for assistance.

Maintenance

Care When Handling

Hold the wine cooler around its sides or base when moving it. Under no circumstances should it be lifted by holding the edges of the top surface.

Installation

Don't cover or block the sides of your appliance.

Servicing

This wine cooler should be serviced by an authorised engineer and only genuine spare parts should be used. Under no circumstances should you attempt to repair the wine cooler yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact the Customer Service Department or a qualified technician.

Switching Off for Longer Periods of Time

When the wine cooler is not in use for a long period of time, disconnect it from the mains supply, empty all wine and clean the appliance, leaving the door ajar to prevent unpleasant smells.

Disposal

Old appliances still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. The refrigerant used in your appliance and insulation materials require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.

Up to date information concerning options of disposing of your old appliance and packaging from the new one can be obtained from your local council office.

If your wine cooler is fitted with a lock, to prevent children being trapped inside, keep the key out of reach and not in the vicinity of the appliance.

When disposing of an old wine cooler break off any old locks or latches as a safeguard.

Specification

Model	CWC16B10
Overall Dimension (Height x Depth x Width)	480 x 495 x 470 mm
Overall Space Required in Use (Height x Depth x Width)	960 x 990 x 500 mm
Overall Gross Volume	51 litres
Storage Volume	50 litres
Defrosting Type	Automatic defrost
Storage Temperature	+5-+20°C
Energy Consumption	0.353 kWh/24h
Energy Grading	N/A
Temperature Rise	N/A
Freezing Capacity	N/A
Power Consumption	65W
Wine Storage Compartment Humidity	50 - 80 %

Features and Specification are subject to change without prior notice.

Safety Warnings

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all instructions carefully before using the wine cooler and keep them for future reference.
- Retain the manual. If you pass the wine cooler onto a third party, make sure to include this manual.
- Keep ventilation openings in the appliance enclosure clear of obstructions.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the wine cooler, unless they are of the type recommended by the manufacturer.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or a qualified technician in order to avoid a hazard.
- Choose a location for your wine cooler away from heat sources such as radiators or fires as refrigerant and vesicant are burnable.
- Do not discard old refrigerators at will in order to avoid environment pollution.
- Young children should be supervised to ensure that they do not play with the wine cooler.
- Do not damage the refrigerant circuit (applicable only for appliances with refrigeration circuits which are accessible to the user).
- The wine cooler must be maneuvered by a minimum of 2 persons.
- The wine cooler is intended to be used exclusively for the storage of wine. Do not store food in this wine cooler.
- This wine cooler is not intended for use by persons (including children) with reduced sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the wine cooler by a person responsible for their safety.
- If your wine cooler is fitted with a lock to prevent children being trapped inside, keep the key out of reach and not in the vicinity of the wine cooler.

WARNING

IT IS HAZARDOUS FOR ANYONE OTHER THAN AUTHORISED SERVICE PERSONNEL TO CARRY OUT SERVICING OF REPAIRS WHICH INVOLVE THE REMOVAL OF COVERS.

TO AVOID THE RISK OF AN ELECTRICAL SHOCK DO NOT ATTEMPT REPAIRS YOURSELF.

eco ideas

	Normal energy consumption	Increased energy consumption
Installation site	In a ventilated room. Protected from direct sunlight. Not situated near to a heat source (radiator, oven). Where the ideal ambient room temperature is approx 20°C.	In an enclosed, unventilated room. In direct sunlight. Situated near to a heat source (radiator, oven). Where there is a high ambient room temperature.
Temperature setting with a thermostat which is approximate (set in stages).	With a medium setting of 5 to 6.	With a high setting: the lower the temperature in the compartment, the higher the energy consumption.
Use	Only open the doors when necessary and for as short a time as possible. Store wine in an organised way. Do not over-fill the appliance to allow air to circulate.	Frequent opening of the doors for long periods with cause a loss of coldness. If wine is not stored in an organised way, searching for an item will mean the door is open for longer.

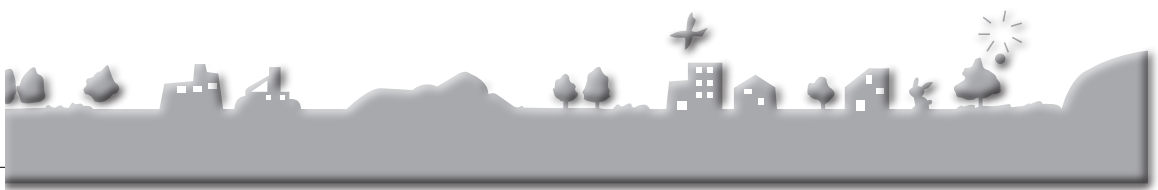

NOTE: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:	
Replacement Part	**Part Number**
Door	SB40042000000
Handle	RB80600750000
Screws	RX401000101168
Shelves	RB8060027200
Bottle Rack	RB80600027300
Instruction Manual	RB30200053400

Partmaster.co.uk

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N.:RB30200053400)